

# **Application Module Student Learning Kit Users Guide featuring the Freescale MC9S12C32**

**For use with the following part numbers:**

**CSM-12C32**

**APS12C32SLK**

**PBS12C32SLK**

## CONTENTS

<b>CAUTIONARY NOTES</b> .....	<b>4</b>
<b>FEATURES</b> .....	<b>5</b>
<b>REFERENCES</b> .....	<b>6</b>
<b>INTRODUCTION</b> .....	<b>7</b>
<b>GETTING STARTED</b> .....	<b>7</b>
<b>OPERATION</b> .....	<b>7</b>
POWER .....	8
<i>PWR</i> .....	8
<i>CONNECTOR J1</i> .....	8
<i>PWR_SEL JUMPER</i> .....	8
RESET SWITCH .....	9
LOW-VOLTAGE DETECT .....	9
TIMING .....	9
COMMUNICATIONS .....	9
<i>COM CONNECTOR</i> .....	10
<i>CONNECTOR J1</i> .....	11
USER OPTIONS .....	11
<i>SWITCHES</i> .....	11
<i>LED'S</i> .....	12
<b>DEVELOPMENT SUPPORT</b> .....	<b>12</b>
ASCII MONITOR OPERATION .....	12
<i>ASCII MONITOR MEMORY MAP</i> .....	12
<i>MONITOR COMMANDS</i> .....	13
<i>INTERRUPT SUPPORT</i> .....	13
<i>INTERRUPT VECTOR TABLE</i> .....	14
SERIAL MONITOR OPERATION .....	15
<i>SERIAL MONITOR MEMORY MAP</i> .....	15
BDM_PORT HEADER .....	16

---

## FIGURES

Figure 1: PWR_SEL .....	8
Figure 2: COM Connector .....	10
Figure 3: MCU_PORT Connector .....	11
Figure 4: BDM_PORT .....	16

## TABLES

Table 1: Serial COM Signals .....	10
Table 2: User Option Jumper Settings .....	11
Table 4: Monitor Commands .....	13
Table 5: Monitor Memory Map .....	12
Table 6: MON12 Interrupt Vector Table .....	14
Table 7: Serial Monitor Memory Map .....	15

## REVISION

August 25, 2006	A	Initial release
-----------------	---	-----------------