
EGR 262
Fundamental Circuits Lab

Presentation for Lab #10
Getting Power off the Wall

Instructor: Paul Gordy

Office: H-115


Phone: 822-7175

Email: PGordy@tcc.edu

Providing Power to Circuits

AC Voltages

Sinusoidal Waveforms

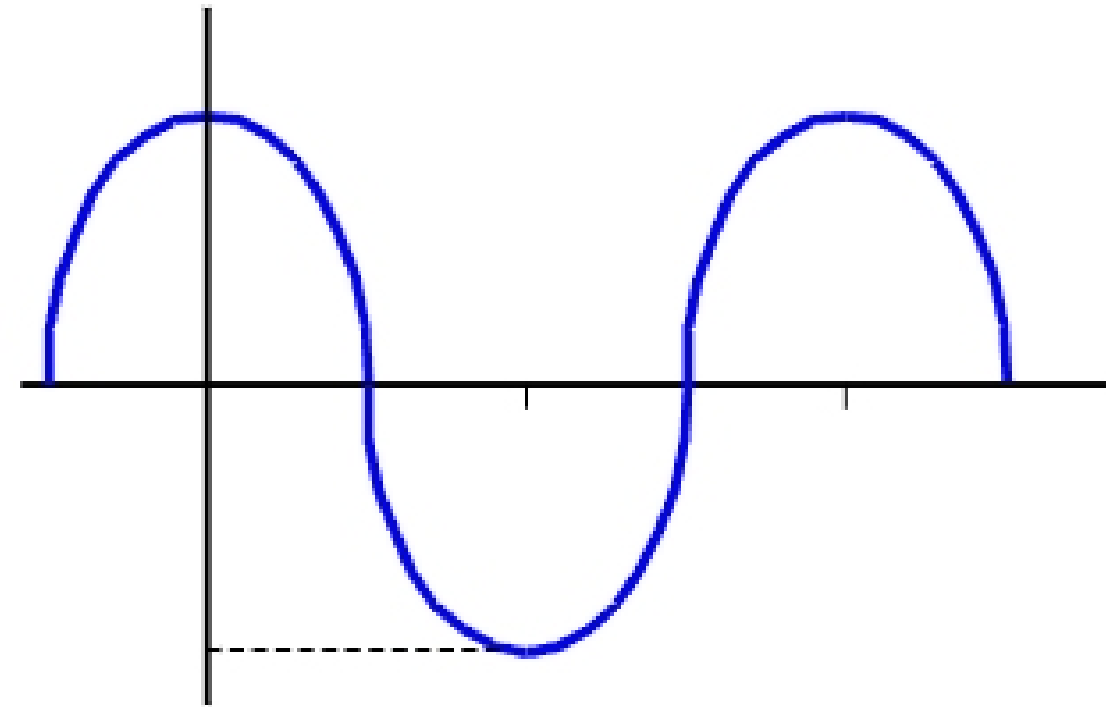

$$= \pi = \frac{\pi}{2}$$

$$= \frac{1}{\sqrt{2}}$$

Example: